



PACHINKO MACHINE

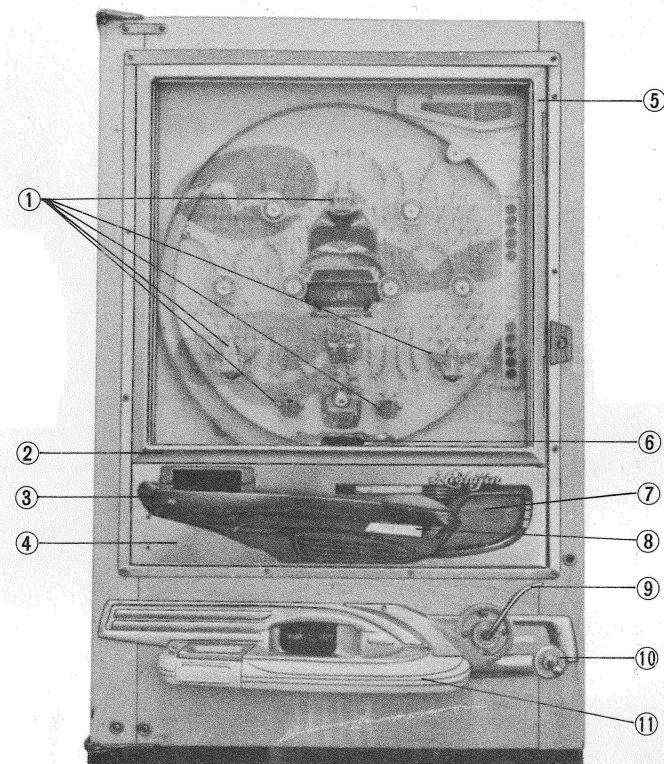

FRONT

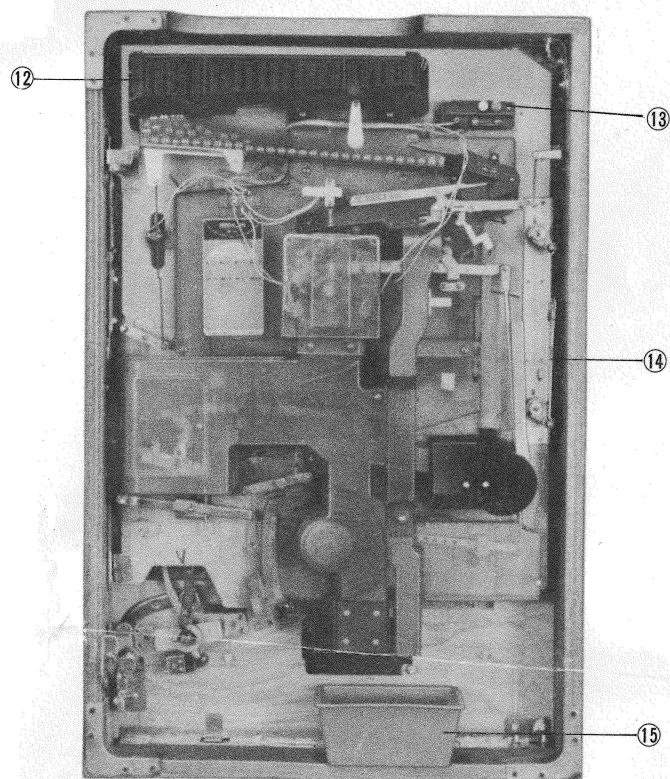

REAR

PARTS LIST

Face designs may vary on different games but parts identification will remain the same.

- | | |
|---|--|
| (1) "WIN" POCKET | (8) SLIDE BAR |
| (2) LOCK TAB (LOCATED AT BEHIND PLASTIC WINDOW DOOR) | (9) PLAYING LEVER |
| (3) PLAYING TRAY | (10) FINGER REST BAR |
| (4) FRONT COVER | (11) RECEIVING TRAY |
| (5) PLASTIC WINDOW DOOR | (12) FEEDER TRAY |
| (6) BALL RETURN CHUTE | (13) BATTERY PINS |
| (7) TRIP LEVER | (14) PLASTIC WINDOW DOOR LOCKING LEVER |
| | (15) STEEL BALL PLASTIC STORAGE TRAY |

INSTRUCTION

Your pachinko machine will give you many hours of enjoyment if you follow these simple instructions.

1. Place machine so that it stands upright on a level surface.
2. Take-out poly-bagged steel balls (200 pieces) from PLASTIC STORAGE TRAY (15) and load approximately one-half balls into FEEDER TRAY (12) and balance into PLAYING TRAY (3).
3. Place empty PLASTIC STORAGE TRAY (15) at position (15) for receiving mis-balls. When PLASTIC STORAGE TRAY (15) become filled by mis-balls, load approximately one-half balls into FEEDER TRAY (12) and balance into PLAYING TRAY (3). Please repeat this procedure.
4. To play, PLAYING LEVER (9) with thumb while grasping bar with forefinger. Snap release by sliding thumb to the right off lever.
5. Smooth lever operation helps control the ball and permits fast play. Skill can be developed by varying thumb pressure on the lever.
6. To release balls from PLAYING TRAY (3), remove SLIDE BAR (8) right to left, then balls will fall into RECEIVING TRAY (11).
7. Batteries are not shipped with pachinko machines. However, the game can be played without electrical power, but it is more exciting when the lights are operating. Hardware and sporting goods stores stock the batteries needed. Get two #4 size 6 volt batteries. Connect the batteries in series (together) with #20 AWG wire. Hook plus terminal to plus terminal, minus terminal to minus terminal. Then run the wire from one battery's plus terminal to the red pin on (13); run a wire from the minus terminal on the blue pin on (13).
8. Servicing:
 - a) Pachinko machine rarely malfunction. If they do, its usually caused by dirt on the balls, and therefore, clean balls often by wiping with a rag. This removes dirt and dust and prevents jams from developing.
 - b) To clean inside of PLASTIC WINDOW DOOR (5), lift-up LOCKING LEVER (14) at rear side of machine and gently open the PLASTIC WINDOW DOOR (5).
 - c) To open LOWER FRONT COVER (4), push-down LOCK TAB (2), which is located at behind PLASTIC WINDOW DOOR (5). Pull hinged PLASTIC WINDOW DOOR (5) forward you in order to inspect flow of balls to TRIP LEVER (7).