




Pachicounter

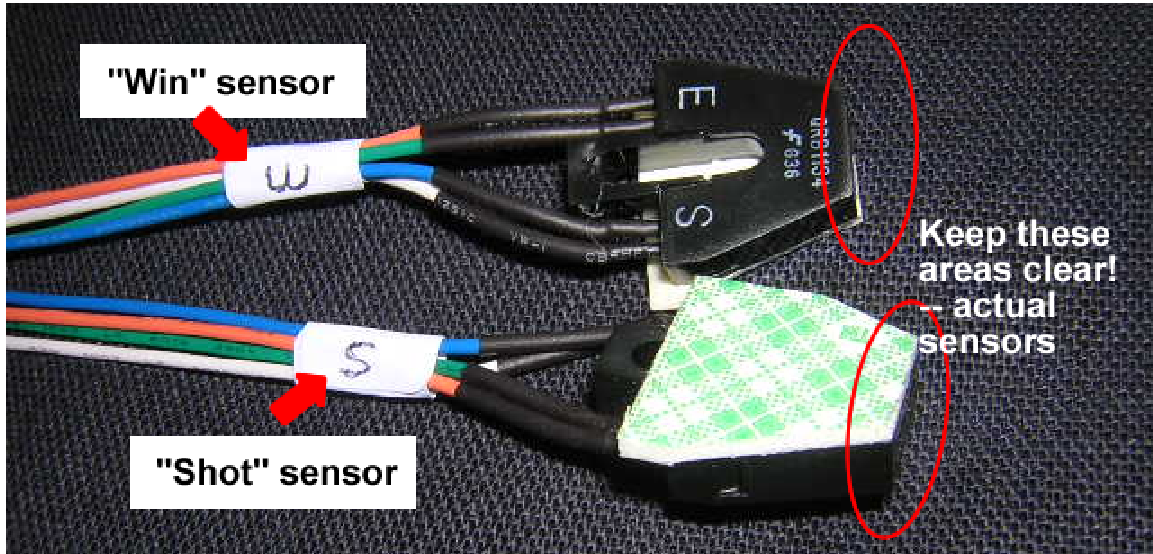


Installation of sensors: The "Shot" sensor goes at the shooting hummer, and the "Win" sensor at the dispensing motor. Use adhesive tapes to place sensors. You need to make adjustments until you find the right positions. Once the counter starts work accurately, use the "Hot Glue" to secure the sensors. Do not use permanent adhesives such as Super Glue or epoxy glue -- You might need to adjust again later.

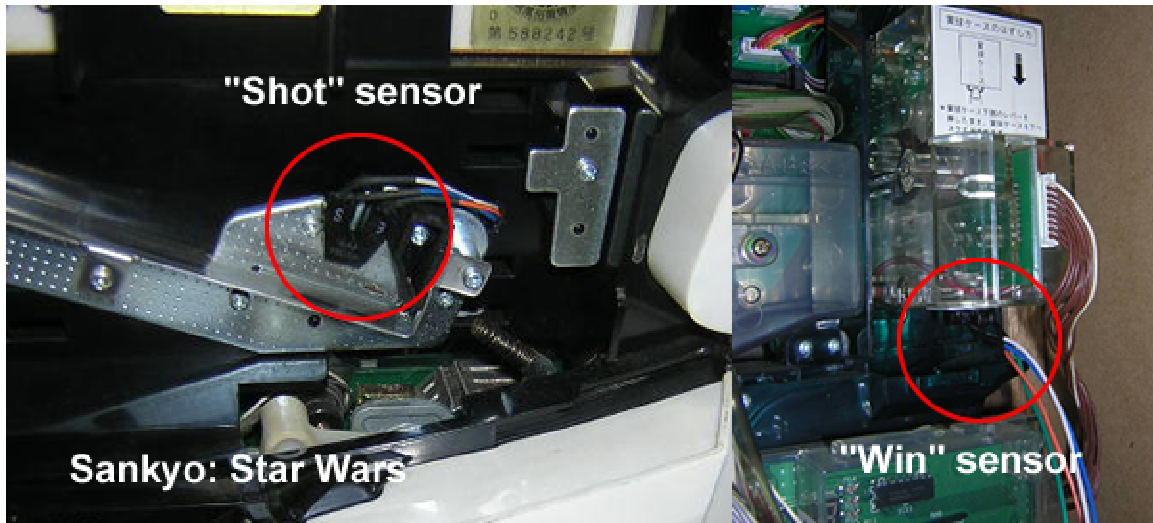


Changing "Win" values. You can change the "win" value by setting the dip switch.

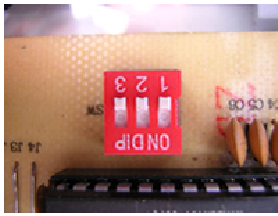


1 point

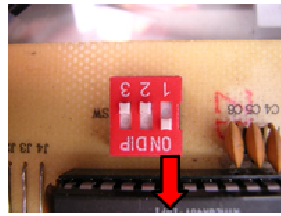

5 point

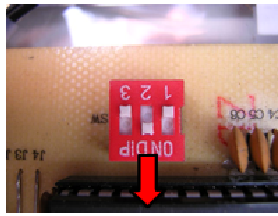

10 point

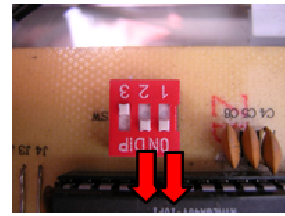

15 point